


UNDERGROUND SERVICE OVERVIEW INSTALLATION

" FINAL CONNECT REQUIREMENTS "

PROCESS STEPS

- ① ENGINEER TO FLAG AND MARK TRENCH ROUTE.
- ② MEMBER WILL THEN INSTALL METER BASE AND DISCONNECT. (MEMBER SUPPLIED)
- ③ FINAL GRADE MUST BE COMPLETED PRIOR TO TRENCHING.
- ④ MEMBER IS REQUIRED TO PAY ALL CONSTRUCTION FEES. PRIOR TO TRENCHING
- ⑤ METER BASE WIRING INSPECTION MUST BE COMPLETED AND APPROVED.
- ⑥ CALL SERVICE COORDINATOR FOR RELEASE OF JOB FOR CONSTRUCTION ONCE ALL CRITERIA HAS BEEN MADE. PHONE # 1-800-542-1140 EXT: 1275
- ⑦ IF AGREED MEMBER WILL BE TRENCHING, MEMBER MAY TRENCH ONLY WHEN ALL COOPERATIVE EQUIPMENT HAS BEEN INSTALLED.

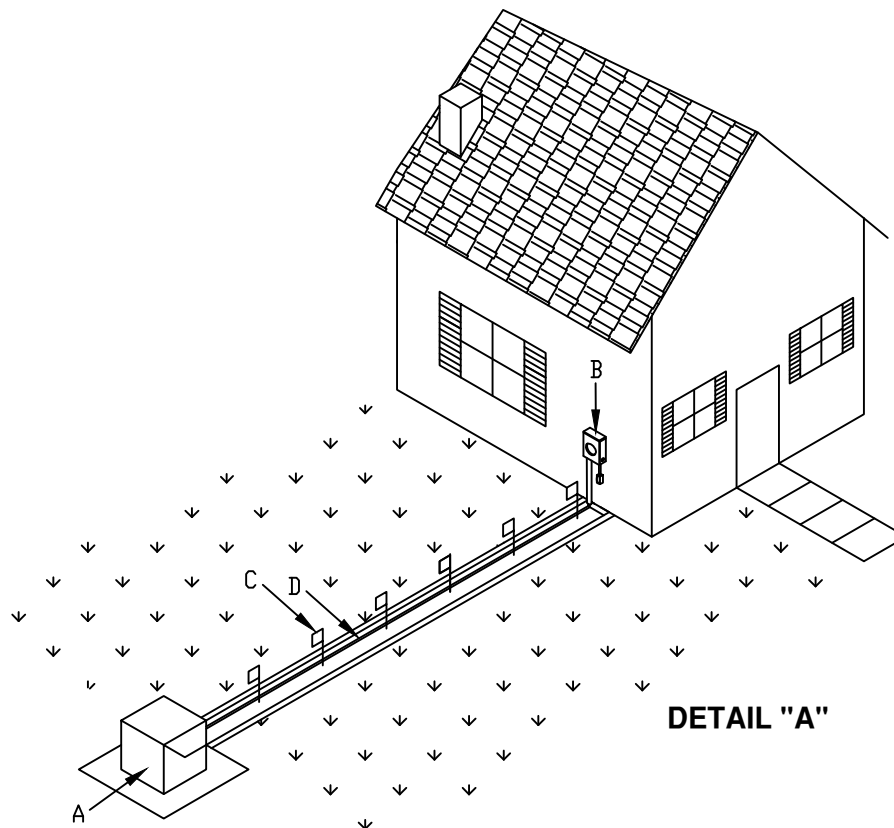

DETAIL "A" NOTES

- (A) COOPERATIVE EQUIPMENT
- (B) METER BASE- SEE SPECIFICATION FOR DETAIL
- (C) TRENCH MARKERS
- (D) TRENCH- SEE TRENCH SPECIFICATION

**CALL: OHIO UTILITIES PROTECTION SERVICE
BEFORE YOU DIG. 1-800-362-2764**

DATE: 07/12/22

CHK BY: JEF

DNW BY: JME

SCALE: NA

NOTES:

**UNDERGROUND SERVICE
OVERVIEW INSTALLATION**

