- ① COOPERATIVE WILL SUPPLY AND INSTALL SERVICE WIRES IN ACCORDANCE WITH THE LINE EXTENSION POLICY FROM THE COOPERATIVE POLE TO THE HOUSE, ALL MATERIAL SUPPLIED BY COOPERATIVE REMAINS PROPERTY OF COOPERATIVE.
- (2) MEMBER TO SUPPLY COOPERATIVE APPROVED METER BASE
- (3) ALL SERVICE ENTRANCE EQUIPMENT TO BE SUPPLIED AND INSTALLED ON HOUSE BY MEMBER. LOCATE WEATHERHEAD ABOVE POINT OF ATTACHMENT OF SERVICE DROP TO BUILDING, CONDUCTORS TO EXTEND AT LEAST 3 FEET BEYOND WEATHER HEAD FOR CONNECTIONS.
- 4 EMERGENCY OR SERVICE DISCONNECT IS REQUIRED PER NEC. EMERGENCY DISCONNECT WOULD BE A SOLID BLADE DISCONNECT, WHEREAS A SERVICE DISCONNECT WOULD BE A FUSED/BREAKER DISCONNECT. A METER/MAIN COMBINATION UNIT SUFFICES AS A SERVICE DISCONNECT.
- (5) ELECTRICAL JOINT COMPOND SHALL BE APPLIED TO ALL ALUMINUM CONDUCTORS BEFORE INSTALLING IN TERMINALS OF METER BASE.
- (6) HEIGHT OF WEATHERHEAD SHALL BE NOT LESS THAN 13 FEET ABOVE GROUND LEVEL FOR PEDESTRIAN CLEARANCE AND 18 FEET FOR DRIVEWAY CLEARANCE.
- (7) WHEN INSTALLING ENTRANCE CABLE, A WATERTIGHT CONNECTOR SHALL BE USED AT THE TOP OF THE METER BASE, AND A NON-WATERTIGHT CONNECTOR SHALL BE USED AT THE BOTTOM OF THE METER BASE, FOR DRAINAGE. ENTRANCE CABLE CLAMPS SHALL BE NO MORE THEN 12 INCHES FROM BOTTOM OF WEATHERHEAD AND NO MORE THAN 12 INCHES FROM TOP OF METER BASE. REMAINING CLAMPS TO BE SPACED NO MORE THAN 30 INCHES APART.
- (8) 3 FEET IS THE MINIMUM CLEARANCE FOR SERVICE CONDUCTORS FROM WINDOWS, DOORS, PORCHES, FIRE ESCAPES, OR SIMILAR LOCATIONS. SEE NEC 230.9.
- (9) ALL WIRING TO BE IN ACCORDANCE WITH THE NEC.
- ${f f 0}$ MEMBERS CONDUCTOR TO EMERGENCY OR SERVICE DISCONNECT CAN NOT GO THROUGH BACK OF METER BASE.
- (1) CONNECTION OF CUSTOMER'S CONDUCTORS TO COOPERATIVE SERVICE DROP SHALL BE THE RESPONSIBILITY OF THE COOPERATIVE, FINAL CONNECT SUBJECT TO INSPECTION BY LOCAL GOVERNMENTAL AUTHORITY, WHERE REQUIRED.


SERVICE ENTRANCE WIRE SIZE TABLE

THREE-WIRE-SINGLE PHASE, RESIDENTIAL SERVICE
CONDUCTOR TYPES AND SIZES
RH-RHH-RHW-THW-THWN-THHN-XHHW

BARE COPPER GROUND WIRE	COPPER	ALUMINUM AND COPPER-CLAD AL.	SERVICE IN AMPERES
	AWG	AWG	
6	4	2	100
4	3/0	4/0	200

DETAIL "A" NOTES

- A WIREHOLDER
 TO BE MOUNTED 1 INCH
 BELOW THE TOP OF THE
 WEATHERHEAD
- (B) CLAMPS
- © WATERTIGHT CONNECTOR
- (D) DISCONNECT PER NEC (NOTE 4)
- (E) WEATHERHEAD
- (F) GROUND CLAMP

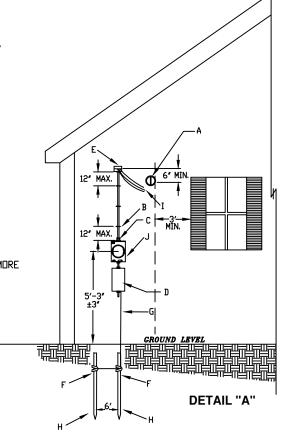

- (G) THE SERVICE GROUNDING CONDUCTOR (BARE COPPER WIRE) SHALL BE CONTINUOUS AND TIED TO THE NEUTRAL CONDUCTOR IN THE SERVICE DISCONNECT (FUSED/BREAKER DISCONNECT) OR MAIN SERVICE PANEL IF THE DISCONNECT IS AN EMERGENCY DISCONNECT (SOLID-BLADE DISCONNECT) AND SHALL NOT BE IN OR ROUTED THROUGH THE METER BASE.
- (H) 2X DRIVEN GROUND RODS MAY BE: 5/8 INCH BY 8 FEET, COPPERCLAD ROD, OR 5/8 INCH BY 8 FEET, SOLID ROD, GALVANIZED, AND DRIVEN ROD SHALL BE A MINIMUM OF 2 FEET FROM FOUNDATION AND 1 FOOT BELOW GROUND LEVEL. GROUND ROD CLAMP SHALL CONNECT GROUND WIRE SECURELY TO GROUND ROD.
- (I) DRIP LOOP
- (J) METER BASE (MEMBER SUPPLIED)

OVERHEAD METER ON HOUS! ENTRANCE CABLE

SCALE:

